

JinKoSolar Photovoltaic Modules Installation Manual



TYPE	MODULE
SINGLE GLASS	JKMxxxN-54HL4R-(V)
	JKMxxxN-54HL4-(V)
	JKMxxxN-54HL4R-B
	JKMxxxN-60HL4-(V)
	JKMxxxN-72HL4-(V)
	JKMxxxN-72HL4-(V)-L
	JKMxxxN-66HL4M-(V)
DUAL GLASS	JKMxxxN-48HL4M-DV
	JKMxxxN-48HL4M-DB
	JKMxxxN-48HL4M-BDV
	JKMxxxN-51QL6-DV
	JKMxxxN-51QL6-DB
	JKMxxxN-54HL4M-BDV
	JKMxxxN-54HL4R-BDB
	JKMxxxN-72HL4-BDV
	JKMxxxN-72HL4-BDX
	JKMxxxN-78HL4-BDV
	JKMxxxN-66QL6-BDV
	JKMxxxN-66HL4M-BDV
	JKMxxxN-66HL4M-BDX
	JKMxxxN-66HL5-BDV

Abbreviations

A: Amper. Unit of current.

AC: Alternating Current.

AR: Anti Reflection.

BIPV: Built Integrated Photovoltaic.

DC: Direct Current.

IEC: International Electrotechnical Commission.

IP: Ingress Protection.

mm: Millimeter. Unit of length.

m: Meter. Unit of length.

N: Newtons. Unit of force.

Nm: Newton meter. Unit of torque (moment).

Pa: Pascal. Unit of pressure.

pcs.: pieces. Number of items.

PPE: Personal Protective Equipment.

PV: Photovoltaic.

RH: Relative Humidity.

STC: Standard Test Conditions.

UV: Ultraviolet.

CONTENTS

1. Introduction	1
1.1 Rules and regulations	1
1.2 Disclaimer	1
2. General information	2
2.1 Regular safety	2
2.2 Electrical performance safety	3
2.3 Operation safety	4
2.4 Fire safety	5
3. Installation conditions	6
3.1 Climate/Environment conditions and Site selection.....	6
3.2 Tilt angle selection.....	7
4. Mechanical Installation.....	7
4.1 Fixed installation-mounting with bolts.....	8
4.2 Fixed installation-mounting with clamps	10
4.3 Tracker Installation	17
5. Electrical Installation.....	18
5.1 Electrical property	18
5.2 Wiring and cables	20
5.3 Connector Insertion	21
5.4 Grounding	22
6. Maintenance and care	23
6.1 Visual Inspection.....	23
6.2 Cleaning	24
6.3 Inspection of Connectors and Cables	24

1. Introduction

Thanks for choosing JinKoSolar photovoltaic (PV) modules (hereafter referred to as “modules”). This installation manual also applies to **Neo Green** products.

This manual provides important safety guidelines for the installation, maintenance, and use of the modules. To ensure correct installation and stable power output, it is necessary to read and understand all installation instructions before proceeding. As PV modules are power generation products, professional technicians must perform the installation and adopt appropriate safety measures to avoid accidents

The protection class of the module: Class II (IEC61730:2023); (IEC61730:2016);

The application class of the module: Class A (IEC61730:2004);

Fireproof rating: Class C, in line with IEC61730-2 standard. JKMxxxN-72HL4-BDX and JKMxxxN-66HL4M-BDX has a Class A fire rating.

1.1 Rules and regulations

The mechanical and electrical installation of modules must comply with all local applicable regulations and codes, including electrical norms, including construction codes and electrical connection requirements, as well as mounting and other equipment instructions. Regulations may differ based on site-specific conditions, such as building roof installation, vehicle applications, etc. Additionally, requirements may vary depending on the installed system voltage (DC or AC). For specific terms, please contact your local authorities.

1.2 Disclaimer

JinKoSolar reserves the right to change the product specifications and this installation manual without prior notice. We recommend that you refer to the JinKoSolar website (www.jinkosolar.com) for the latest product and documentation information. JinKoSolar does not accept any responsibility for any loss, damage or expense arising from the installation, operation, use or maintenance of the Module, as the use of this manual and the conditions under which the Module is installed, operated, used, and maintained are beyond JinKoSolar's control.

JinKoSolar disclaims any liability for infringement of patents and third-party rights that may result from the use of the products. Customers are not authorized to use any patents or patent rights, express or implied, by using JinKoSolar products. The information in this manual is based on JinKoSolar's knowledge and experience which is believed to be reliable, including but not limited to, the product specifications above, such information and related recommendations do not constitute the terms of any warranty, express or implied.

2. General information•

There are two labels on the module which contain the following information:

1. Nameplate: Each module has a nameplate, which indicates the module type, the main electrical and safety specification parameters, etc.
2. Serial Number and Bar Code Label: Each module has a unique serial number and bar code as a unique identifier, which is laminated inside the module permanently. This label can be normally found in the front side of its corners, and in the middle of the rear side of the module.

2.1 Regular safety

- Handle modules during deliveries and transport with care to avoid large shocks that could damage the assembly or /and cause cracks in the cell.
- Do not apply excessive force or objects on the module surface, do not impact, and do not twist the module frame to prevent cell damages and/or cell cracks.
- Do not use the modules to replace or partly replace roofs and walls of buildings. Follow your local regulations for building integration of photovoltaics.
- Avoid touching or modifying any part of the modules unless explicitly authorized by JinKoSolar. Refrain from removing, attempting to repair, or disassembling any component installed by JinKoSolar.
- Junction boxes and female-male connectors interconnections of the modules covered by this manual meet IP68 (IEC60529) requirements. However, they must be protected from prolonged direct sunlight and water immersions, to ensure long-term reliability.
- Do not drill holes in the frame without authorization from JinKoSolar, as it may cause corrosion or other negative effects.
- Do not lift modules using the attached cables or the junction box.
- Prohibit modules, junction boxes and connectors from coming into contact with unapproved chemicals: e.g., petrol, oil, acetone, alcohol, film strippers, potting compounds, TBP, cleaning agents, herbicides, rust inhibitors, descaling agents, etc. For more information, please contact JinKoSolar technical support department.
- Do not use junction boxes or connectors that are contaminated (with dust, corrosion, etc.), or broken modules.
- Do not stand (see Figure 1) or step on the module (see Figure 2) as there is a risk of damage to the modules and injury to the user.



Figure 1



Figure 2

- Pay attention to preventing sand, stones or other hard debris kicked up by operation and maintenance vehicles or

lawn mowers during operation from striking the surface of the modules, causing glass or module damage.

- Use appropriate protective equipment when installing modules to avoid direct contact, reduce the risk of electric shock, and protect hands from sharp edges. This includes standard and insulated safety tools and equipment (safety helmet, insulated gloves and rubber shoes, harness or belts, ladder, etc.).
- When installing or maintaining the PV system, please do not wear metal rings, watches or other metal products, to avoid electric shock dangers or module damage.
- Do not use wet tools, and refrain from working in rain, snow or windy conditions.
- Modules should be stored at the project site with additional rain protection to avoid direct open-air placement before they are installed.
- In order to avoid external matter such as sand or water vapour from entering and causing connection safety problems, once the modules are taken out of the box and installed, the connectors between the modules need to be connected in time, and the connectors need to be kept dry and clean during the installation process. In areas with heavy dust, high salinity, or severe pollution, dust plugs (see Figure 3) must be installed on the connectors to prevent contamination before the connectors are mated. Prior to purchasing the modules, it is necessary to communicate with JinKoSolar about the project site conditions to ensure the provision of dust plugs. However, please note that the exposure time of dust plugs to the environment should not exceed one month.



Figure 3 connector dust plugs

2.2 Electrical performance safety

- Modules generate DC electrical energy when exposed to sunlight or other light sources. Improper contact with live parts, such as terminals, may result in burns, sparks, and lethal shock.
- Damage to, or opening of the front or rear glass of the module allow moisture ingress that compromise the internal circuit of the panel, can create serious electrical hazards, including the risk of fire. These modules cannot be repaired and must be removed and replaced immediately.
- Electrical specifications shown in datasheets are measured under Standard Test Conditions (STC), thus: Irradiance 1000W/m², module cell temperature 25°C, air mass = 1.5. The current and voltage generated by modules in different environments are different from measured at STC. Therefore, when determining the specifications of the rated voltage, cable capacity, fuse capacity, controller capacity, and other output power related specifications, take the values of 1.25 times the short-circuit current and open-circuit voltage marked on the module. This multiplier serves as a reference and is commonly used; however, it is important to consult with your inverter/controller supplier for system configuration design, as local regulations may vary, impacting these considerations.
- Snow, water, or other reflective medium in surrounding environments that intensify light reflection will increase

output current and power. And module voltage and power will increase under low temperature condition.

- Artificially concentrated sunlight shall not be directed on the module. Do not expose the back of the single glass module directly to sunlight.
- To prevent arcs and electrical shocks, do not disconnect modules under load without authorization; if disconnecting the connector is needed, turn off DC and AC inverters or cut off the main switch of the converter first.
- PV module operation can only be stopped when they are kept from sunlight or covered by hard board (opaque material) or UV-proof materials.
- When connecting a battery storage system, follow the battery manufacturer's instructions for correct installation, operation, and maintenance to ensure system operation and user safety.
- Due to the risk of electrical shock, do not perform any work if the terminals of the module are wet.
- Do not operate on wet modules, if this is needed, only by wearing PPE.
- Please follow the cleaning requirements in this manual when cleaning modules, refer to section 6.2.
- Only the modules of the same size and the specifications within same range can be connected in series.
- The number of modules that can be connected at a PV installation shall be determined by a qualified institution or person in accordance with the design specifications of the photovoltaic system and the local electrical design specifications.
- Connect the male and female connectors correctly, before connecting, always ensure that the contacts are corrosion free, clean, and dry; Check the wiring condition, all wires shall not be detached from the modules, and secure the wires with cable ties so that the wires do not scratch or squeeze the rear side of the module.
- Do not touch the module, junction box or the connectors with bare hands during installation or under sunlight, regardless if the module is connected to or disconnected from the system. The glass surface and the frame may be hot, posing a risk of burns and electric shock.
- Do not insert any metal object into the connector.
- Keep connectors dry and clean, ensuring they are in good operating condition.

2.3 Operation safety

- Read and follow the manual "Handling, Storage and Unpacking Instructions" to ensure proper management of the pallets. Custom unpacking methods are prohibited.
- Before unpacking, please check the product type, power bins, serial number, and relevant suggestions on the paper of the packaging box.
- It is recommended to use art knife or cutter to remove the packing belt and wrapping film. Violent removal is prohibited to avoid scratching the modules in the box.
- Ensure a proper environment before unpacking as well as enough man force (2 people minimum) to prevent the module from slipping and hitting other modules, causing scratches, cracks, or deformation on the modules.
- Once the modules are removed from the pallet, they shall be promptly installed and connected to the inverter. If they are not installed immediately, protective measures (such as adding rubber joint cover, etc.) must be taken on

the connectors' head to prevent water vapour, sand, dust, insects, or other contaminants from getting inside the connector and causing poor contact or corrosion of the connector.

- When inspecting PV modules with AR coating technology, it will be normal to observe modules with a slight color difference at different angles.
- Thermal expansion and contraction effects occur on the modules. During installation, the distance between two adjacent modules must be $\geq 10\text{mm}$. If there are special requirements, please confirm with JinKoSolar before installation.
- During the installation, as for module removal, maintenance, and any other related processes, it is recommended that the force applied between the cable and the connector, and the cable and the junction box, is not more than 60N.
- Meaning of crossed – out wheeled dust bin:
 - Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
 - Contact your local government for information regarding the collection systems available.
 - If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
 - When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.



2.4 Fire safety

- Please use appropriate module components to comply with local laws and regulations, as well as the building fire safety requirements before installation, such as fuses, circuit breakers and grounding connectors, etc.
- JinKoSolar modules fire rating is set according to IEC61730-2:2023 standard, and it can be found in the corresponding certificates. The Fire Class Rating of a module for roof mounted system shall meet local code requirements in order to achieve the specified System Fire Class Rating for a non-BIPV module. All PV systems have limitations of inclination required to maintain a specific System Fire Class Rating.
- For roof-top installations, it is responsibility of the designers or installers to ensure that the roof is suitable not only in terms of the structural load-bearing capacity, but also the fire resistance for the installation of the PV modules in accordance to local regulation.
- Make sure that the rear side of the module and the mounting surface are fully ventilated. When To facilitate ventilation and heat dissipation of the module, the minimum distance between the lower edge of the module frame and the highest point of the mounting surface must be $\geq 10\text{cm}$. For special installation methods, such as on corrugated metal sheets, the distance between the lower edge of the module frame and the roof shall be determined by the installer according to local regulations. Adequate ventilation must be ensured under local climatic conditions to keep the module within its operating temperature range. For minimum clearance requirements for other special cases, please contact JinkoSolar' s technical support department.
- Different roof structures and installation modes will affect fireproof performance of buildings. Improper installation

may lead to the risk of fire.

- Do not install the modules anywhere close to open flames or flammable materials (hay, straw, wood, solvents, oils, etc.), or exposed to flammable and explosive gases.

3. Installation conditions

3.1 Climate/Environment conditions and Site selection

The recommended weather conditions for installing modules are:

- a) Humidity: < 85% RH
- b) Ambient air temperature range: -40°C to +40°C
- c) Operating temperature: -40°C to +70°C

In most applications, JinKoSolar PV modules should be installed in a location where they can receive maximum sunlight throughout the year. In the Northern Hemisphere, the module should face south, and in the Southern Hemisphere, the modules should face north. Modules facing 30 degrees away from due South (or due North) will lose approximately 10% to 15% of their power output. If the module faces 60 degrees away from due South (or due North), the power loss will be 20% to 30%. Refer to the longitude and latitude of the location to determine the optimal azimuth of the module.

The maximum altitude of module installation is 2000m.

JinkoSolar standard PV modules have passed the IEC 61701 salt spray corrosion test (method 6). In the case modules are installed within 50m to 500m from the seashore, the connectors shall be protected, i.e., adding dust plugs. After removing the dust plugs, connect the connectors immediately and take other anti-rust measures to prevent rust. Offshore PV modules are recommended if installation within 50 metres is required, please consult JinKoSolar for details.

If the project is within 10 kilometers of the seaside, it is necessary to communicate with Jinko in advance about the project site before purchasing modules.

Do not install the PV module in a location where it would be immersed in water or continually exposed to water from a sprinkler or fountain, etc.

When choosing a site, avoid trees, buildings or any other obstruction that could create shadows on the modules at any time throughout the year. Even though bypass diodes have been installed on the modules, shadows can still affect the optimal performance and operational safety of photovoltaic modules.

It is possible that modules installed with restricted airflow are not allowed for use in some hot locations, depending on system design parameters. Installers should assess if the system design at a specific geographic location will result in a 98th percentile module operating temperature¹ greater than 70°C, and must consider and avoid these factors in design of systems.

¹ 98th-percentile temperature: represents the temperature that is larger than 98% of all the temperatures, and consequently it is met or exceeded only 2% of the time. It is to be determined from measurements taken on hourly-basis, or more frequently. For a standard year, the temperature that a module would be expected to equal or exceed for 175,2 h per year, is less than 70 °C.

3.2 Tilt angle selection

The tilt angle of the PV module is measured between the surface of the PV module and a horizontal surface (see Figure 4). The module generates maximum output power when directly facing the sun.

During the installation, JinKoSolar suggests the module tilt angle maintained at more than 10° to allow the rain to wash away the dust, while the module with too small tilt angle requires more frequent cleaning, which will affect the appearance and performance of the modules.

For standalone systems, the tilt angle of the modules should be selected to optimize the performance based on the season and sunlight. In general, if the module output is adequate when the irradiance is low (i.e., winter), the angle chosen should be adequate during the rest of the year. For grid-connected systems, modules should be tilted at the angle that the energy production from the modules will be maximized on an annual basis.

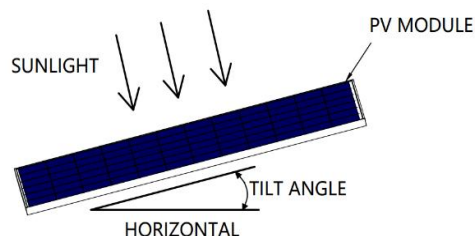


Figure 4 PV module tilt angle

4. Mechanical Installation

Modules can usually be mounted by using the following methods: fixed installation-mounting with bolts, fixed installation-mounting with clamps and tracker installation.

* Notes:

- All installation methods herein are only for reference, and they are based on the test results from third-party tests and JinKoSolar internal tests. While we extensively test various mounting scenarios, the vast diversity in materials and designs globally, including special profiles, makes it impossible to guarantee exact load specifications for installations with unique materials or designs. Special designs, should be tested by the mounting companies, to ensure the reliability of the systems.
- JinKoSolar will not provide related mounting accessories.
- the system installer or trained professional personnel must be responsible for the PV system's design, installation, and mechanical load calculation and system security. The design must take into consideration module's bent/torsion, frame dimensions, fixation holes location and any other mechanic characteristic.
- Before installation, the following items shall be addressed:
 - a) Visually check the module for any damage. Clean the module if any dirt or residue remains.
 - b) Check if module serial number stickers match.
- The maximum loads that different types of modules can withstand on the front side and back side are dependent on installation methods, which can be referred to Table 2 and 5-7. If there is heavy snow and strong wind on the module installation site, take special protection to meet the actual requirements.
- All load values provided in this manual are **maximum test load values**, measured in Pa and describe as follows:

$$\text{Maximum Test Load} = 1.5 (\text{Safety factor}) \times \text{Design load}$$

- The module must be mounted on the bracket according to the following installation. If there are other installation,

please consult JinKoSolar and obtain approval, otherwise the warranty will be invalid.

- Under the mounting method of the fixed bracket as specified in this manual, the modules will be concave to varying degrees due to the gravity, which is a normal physical phenomenon and does not affect the normal use and performance of the modules. Any other external forces will cause additional sinking of the modules, so any operation of the modules should comply with this manual.

4.1 Fixed installation-mounting with bolts

Install the module on the rack using anti-corrosion bolts, elastic washers and flat washers with sufficient torque to allow the module to be properly secured. See Figure 5 (a) and (b) for detailed installation information.

Table 1 lists different sizes of bolts for different mounting holes, along with torque recommendations. However, it is crucial to consult the installer or bracket supplier to obtain the exact torque value for your specific installation.

The bolt mounting locations and load capacities corresponding to different module types are detailed in Table 2. For the quantity and dimensions of mounting holes, please refer to the product datasheet.

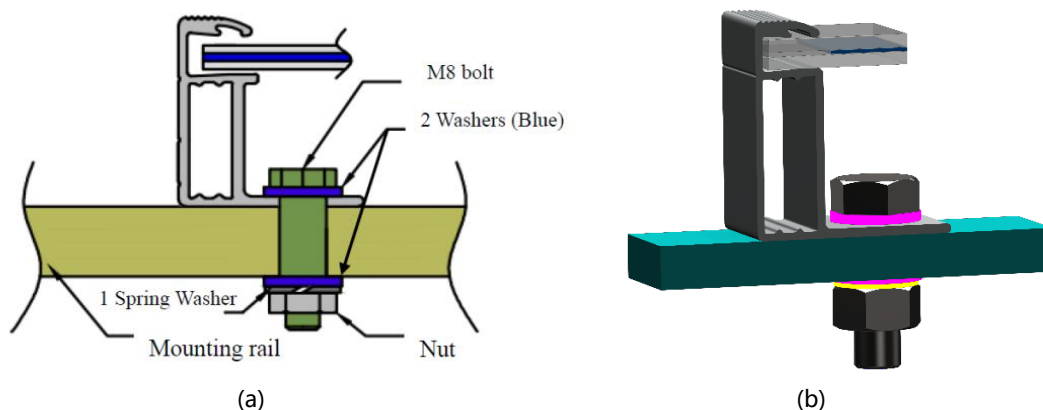


Figure 5 Mounting with bolts (a) schematic (b)3D design of the installation with bolts

Mounting hole (mm)	Bolt size	Reference torque (Nm)
14 x 9	M8	16-20
10 x 7	M6	9-12

Table 1 Bolts for different mounting holes

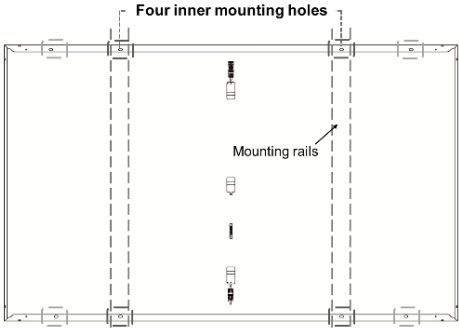
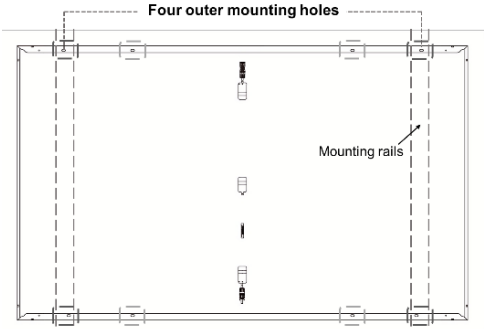
Bolting installation		
Four inner mounting holes -8 mounting holes modules  Four outer mounting holes -8 mounting holes modules 		
Module type (JKMxxx...)/Glass thickness	Four inner mounting holes (Maximum Test Load Pa)	Four outer mounting holes (Maximum Test Load Pa)
N-48HL4M-DV (2.0mm) N-48HL4M-DB (2.0mm) N-48HL4M-BDV (2.0mm) N-54HL4R-(V) N-54HL4R-B N-54HL4R-BDB	+6000/-4000	/
N-48HL4M-DV (1.6mm) N-48HL4M-DB (1.6mm) N-51QL6-DB (1.6mm) N-51QL6-DV (1.6mm) N-54HL4M-BDV	+5400/-2400	/

Table 2 Test loads for inner and outer four-hole mounting for different modules

Notes: the figures show **mounting rails parallel to the short side of the module**. If special mounting system or special installation method is required, please verify the torque and material compatibility with the supplier of the racking system.

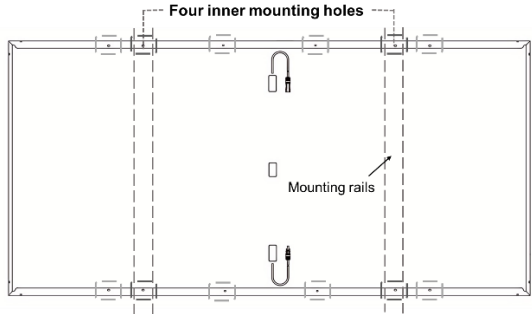
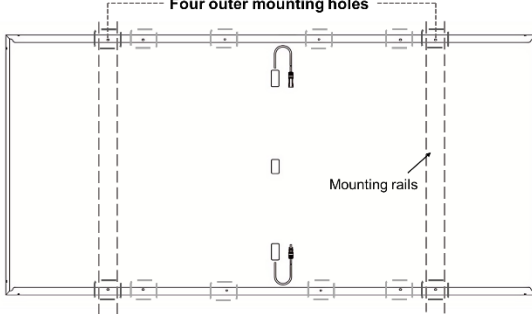
Bolting installation		
Four inner mounting holes -12 mounting holes modules  Four outer mounting holes -12 mounting holes modules 		
Module type (JKMxxx...)/Glass thickness	Four inner mounting holes (Maximum Test Load Pa)	Four outer mounting holes (Maximum Test Load Pa)
N-72HL4-BDX	+6000/-4000	/
N-78HL4-BDV N-72HL4-(V) N-72HL4-(V)-L N-72HL4-BDV N-60HL4-(V)	+5400/-2400	/
N-66QL6-BDV N-66HL4M-BDV N-66HL4M-(V) N-66HL5-BDV	/	+5400/-2400
N-66HL4M-BDX	/	+6000/-4000

Table 3-Continued Test loads for inner and outer four-hole mounting for different modules

Notes: the figures show **mounting rails parallel to the short side of the module**. If special mounting system or special installation method is required, please verify the torque and material compatibility with the supplier of the racking system.

Certain Jinko Solar modules include a set of 400mm mounting holes. These are reserved for specific tracker applications and are not covered in this section. For details, please refer to Section 4.3 "Tracker Installation".

4.2 Fixed installation-mounting with clamps

The clamps must not be installed in contact with the front glass of the module and must not deform the module frame. Recommended clamp schematic shown as followed (see Figure 6). Ensure that the clamps do not create a shadow on the module. Under no circumstances may the frame be altered. When choosing the mounting method for the clamps, make sure that there are at least four clamps on each module. Different mounting positions of the clamps determine the maximum load capacity of the module. Table 5-7 as followed show the different mounting methods and the positions of the clamps for the different mounting methods. The distance between the installation position of the long-side clamp and the edge is represented by L in Table 5-7. The distance between the installation position of the short-side clamp and the edge is represented by S in Table 5-7. Both L and S refer to the distances from the center of the clamp to the corresponding edges.

Depending on the local wind and snow loads, if there is a possibility of excessive load combinations:

- Additional clamps could be required to ensure that the module has enough load carrying capacity. Clamp dimensions, contact area and torque must follow minimum values shown in Table 3.
- Longer and/or stronger profiles/rails could be required to ensure that the module has enough load carrying capacity.
- Modules with a length greater than 2.2 m and a width greater than 1.3 m are recommended to be mounted with the camber clamps shown in Fig. 6 d), which enables the clamps to fit better with the frame and provide more stable performance under extreme environmental conditions.

The torque value applied during installation of the clamps should be high enough to securely hold the module. Please always consult the installer or bracket supplier for exact torque value.

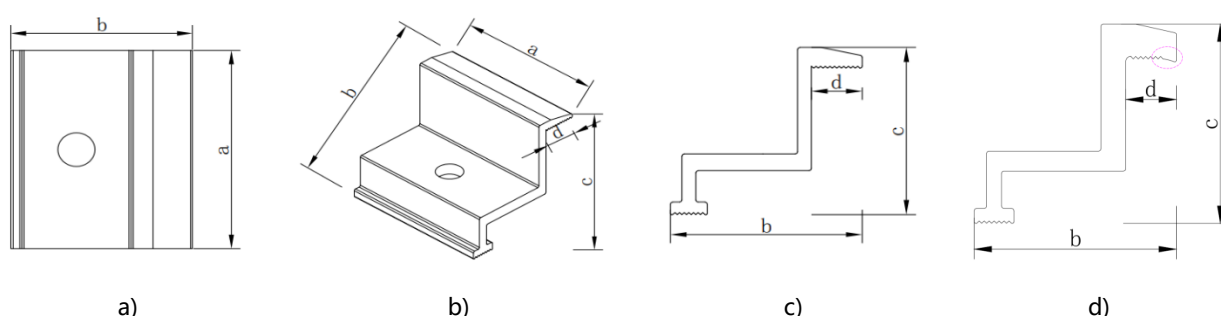


Figure 6 Recommended clamp schematic

Length of the clamp (a)	≥50 mm ≥60 mm for modules greater than 2.2x1.3 m
Thickness	≥3 mm
Overlap of the frame of the module (d)	10-11 mm
Torque	16-20 Nm (M8 bolt)

Table 4 Minimum values for clamp dimensions, contact area and torque

The minimum dimensions of clamps specified in this installation manual have been tested and verified through the installation process and serve as a baseline for proper installation. However, it is important to note that these minimum values may not guarantee compatibility with all variations of clamps that may exist in the market. Using clamps with dimensions lower than the recommended minimums may result in insufficient clamping force and compromise the integrity of the installation.

It is important to ensure that any alternative clamps used in the installation meet the necessary performance standards and do not compromise the safety and integrity of the system.

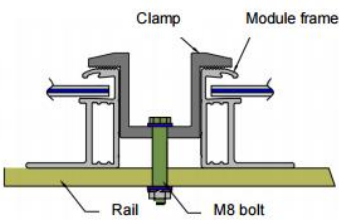
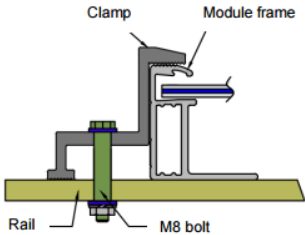
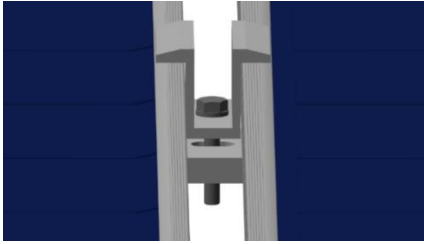
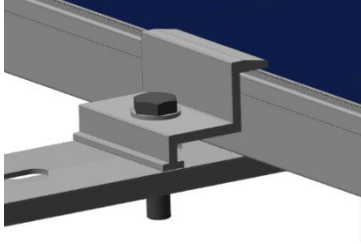
 Diagram illustrating the middle clamp module installation. A central rail is shown with two module frames being clamped onto it. Labels include 'Clamp', 'Module frame', 'Rail', and 'M8 bolt'.	 Diagram illustrating the end clamp module installation. A single module frame is shown being clamped onto a rail. Labels include 'Clamp', 'Module frame', 'Rail', and 'M8 bolt'.
 3D rendering showing the middle clamp module installation, highlighting the rail and the module frame being secured.	 3D rendering showing the end clamp module installation, highlighting the rail and the module frame being secured.
Middle clamp module installation	End clamp module installation

Table 4 PV module installed at the side with Clamp mounting

Please thoroughly review the maximum test load specified for each module type, contingent on the chosen installation method.

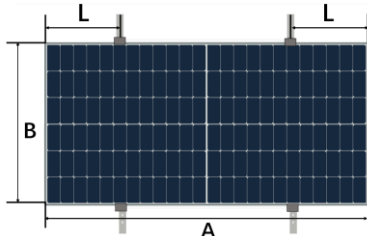
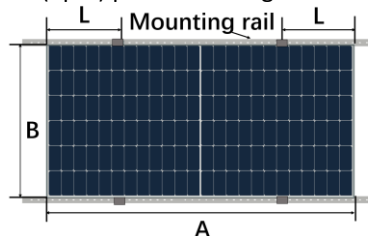
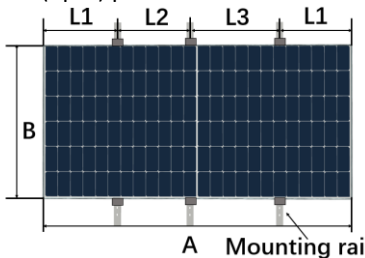
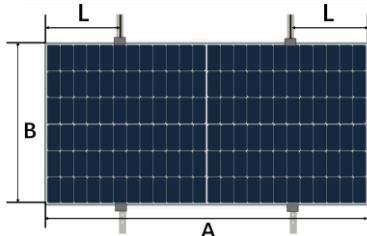
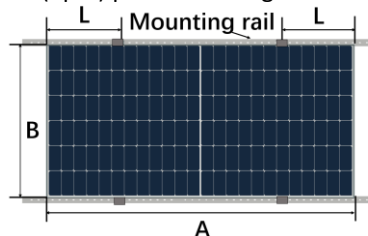
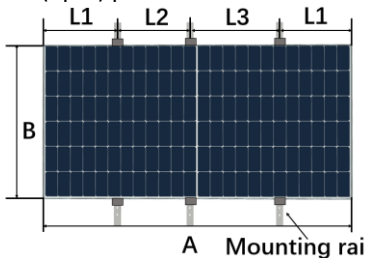
Long side clamping (with rails)							
Method A Long side clamping (4pcs.), rails (2pcs) parallel to short side. 		Method B Long side clamping (4pcs.), rails (2pcs) parallel to long side. 		Method C Long side clamping (6pcs.), rails (3pcs) parallel to short side. 			
Mounting method /Range Module Type (JKMxxx...) /Height/Glass thickness	Method A			Method B		Method C	
	L=	L=	L=	L=	L=	L1=400	L1=450
	A/4±50	A/5~A/4	A/5±50	A/4±50	A/5±50	L2=(A/2-L1+50) L3=(A/2-L1-50)	
	Maximum test load (Pa)						
N-54HL4-(V) N-54HL4R-(V) N-54HL4R-B	/	/	+6000 /-4000	/	+2400 /-2400	+6200 /-4200	/
N-54HL4R-BDB N-48HL4M-DV (2.0mm) N-48HL4M-DB (2.0mm) N-48HL4M-BDV (2.0mm)	/	+6000 /-4000	/	/	+3600 /-2400	+6200 /-4200	/
N-48HL4M-DV (1.6mm) N-48HL4M-DB (1.6mm)	/	+5400 /-2400	/	/	+2800 /-2400	+6000 /-3000	/
N-60HL4-(V)	/	/	+5400 /-2400	/	+2400 /-2400	+5800 /-3200	/
N-54HL4M-BDV	/	/	+5400 /-2400	/	+3200 /-2400	/	+5800 /-3200

Table 5 Maximum test load values for different modules with long side clamps mounted with rail

Long side clamping (with rails)							
Method A Long side clamping (4pcs.), rails (2pcs) parallel to short side. 		Method B Long side clamping (4pcs.), rails (2pcs) parallel to long side. 		Method C Long side clamping (6pcs.), rails (3pcs) parallel to short side. 			
Mounting method /Range Module Type (JKMxxx...) /Height/Glass thickness	Method A			Method B		Method C	
	L=	L=	L=	L=	L=	L1=400	L1=450
	A/4±50	A/5~A/4	A/5±50	A/4±50	A/5±50	L2=(A/2-L1+50) L3=(A/2-L1-50)	
	Maximum test load (Pa)						
N-66HL5-BDV	+5400 /-2400	/	/	/	/	/	/
N-66HL4M-BDV N-66QL6-BDV	/	+5400 /-2400	/	+3000 /-2400	/	/	+5800 /-3000
N-66HL4M-V N-72HL4-(V)-L	/	+5400 /-2400	/	/	/	/	/
N-66HL4M-BDX N-72HL4-BDX	+6000 /-4000	/	/	+3600 /-3000	/	/	+6400 /-4000
N-72HL4-(V) (B30)	/	+5400 /-2400	/	/	/	/	+5800 /-2400
N-72HL4-(V) (B35)	/	/	+5400 /-2400	/	/	/	+5800 /-3000
N-72HL4-BDV	+5400 /-2400	/	/	+3000 /-2400	/	/	+5400 /-3000
N-78HL4-BDV	+5400 /-2400	/	/	+2800 /-2400	/	/	+5400 /-2800

**Table 5-Continued Maximum test load values for different modules
with long side clamps mounted with rail**

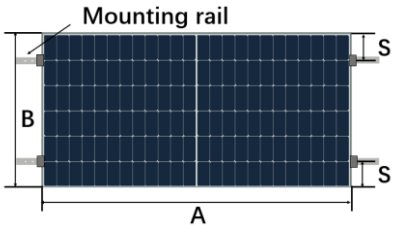
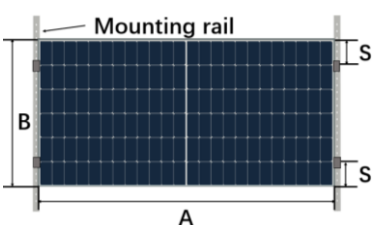
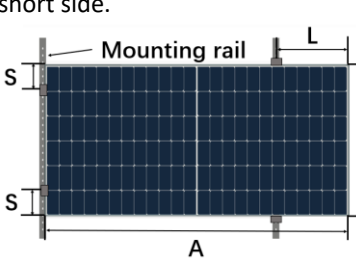
Short-side clamping/long-side and short-side clamping (with rails)					
Method D Short side clamping (4pcs.), rails (2pcs) parallel to long side. 		Method E Short side clamping (4pcs.), rails (2pcs) parallel to short side. 		Method F Short & long side clamping (4pcs.), rails (2pcs) parallel to short side. 	
Mounting method /Range Module Type (JKMxxx...) /Height/Glass thickness	Method D		Method E		Method F
	S=130-240	S=100-240	S=130-240	S=100-240	S=100~240 L=A/5±50mm
	Maximum test load (Pa)				
N-48HL4M-DV (2.0mm) N-48HL4M-DB (2.0mm) N-48HL4M-BDV (2.0mm) N-54HL4R-(V) N-54HL4-(V) N-54HL4R-B N-54HL4R-BDB N-60HL4-(V) N-54HL4M-BDV	/	+2000/-1600	/	+1600/-1600	+2400/-2400
N-48HL4M-DV (1.6mm) N-48HL4M-DB (1.6mm)	/	+2000/-1600	/	+1600/-1600	+2200/-2200
N-66HL4M-BDV N-66QL6-BDV	+1600/-1000	/	+800/-800	/	/
N-72HL4-BDX	+2000/-1200	/	+1200/-1200	/	/
N-72HL4-(V) (B30)	+1600/-1200	/	+800/-800	/	/
N-72HL4-BDV	+1600/-1200	/	+1000/-1200	/	/
N-78HL4-BDV	+1600/-800	/	+800/-800	/	/

Table 6 Maximum test load values for different modules with short/long clamps mounted with rails

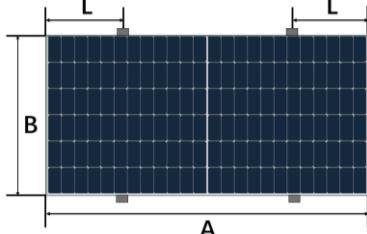
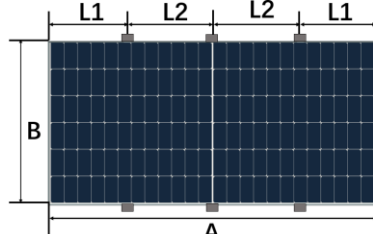
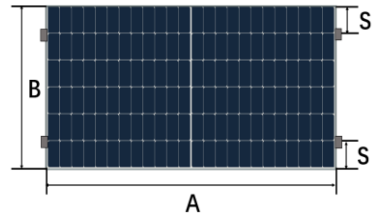
Railless clamping					
Method G Long side clamping (4pcs) 		Method H Long side clamping (6pcs.) 		Method I Short side clamping (4pcs.) 	
Mounting method /Range Module Type (JKMxxx...) /Height/Glass thickness	Method G			Method H	Method I
	L= A/4±50	L=A/5~A/4	L= A/5±50	L1= A/4±50 L2=(A/2-L1)±50	S≤100
	Maximum test load (Pa)				
N-54HL4R-(V) N-54HL4R-B	/	/	+3200/-2400	+3200/-2400	+1600/-1600
N-48HL4M-DV (2.0mm) N-48HL4M-DB (2.0mm) N-48HL4M-BDV (2.0mm) N-54HL4R-BDB	/	/	+3600/-2400	+3600/-2400	+1600/-1600
N-48HL4M-DV (1.6mm) N-48HL4M-DB (1.6mm)	/	/	+2800/-2400	/	+1600/-1600
N-54HL4-(V)	/	/	+4200/-2400	+4800/-2400	+1600/-1600
N-60HL4-(V)	/	/	+3200/-2400	/	+1600/-1600
N-54HL4M-BDV	/	/	+3200/-2400	+3200/-2400	+1600/-1600
N-66QL6-BDV N-66HL4M-BDV	/	+3000/-2400	/	+3600/-2400	+800/-800
N-72HL4-BDX	+3600/-2400	/	/	+4200/-2400	+1200/-1200
N-72HL4-(V) (B35)	/	+2400/-2400	/	/	/
N-72HL4-BDV	+3000/-2400	/	/	+3600/-2400	+1000/-1000
N-78HL4-BDV	+2800/-2400	/	/	+3400/-2400	/

Table 7 Maximum test load values for different modules with clamps mounted without rails

4.3 Tracker Installation

JinKoSolar modules also have high compatibility with various mainstream tracker systems in the industry. The maximum test load that JinKoSolar module can achieve is as listed in Table 8 below.

Module type (JKMxxx...)	Tracker system	Installation	Test load (Pa)
N-54HL4-(B) N-54HL4-(V)	ATI V3	Through bolt clamp 1300/1400mm	+4100/-3200
N-78HL4-(V)	NEXTracker 1P	NT Standard Rail (400); Mounting hole: 400mm	±1800
N-72HL4-BDV	NEXTracker 1P	NT Standard Rail (400); Mounting hole: 400mm	±2400
	PVH AXONE DUO- INFINITY	Short rail: 91x428x1; Mounting hole: 400mm	±1800
	ATI V3	Through bolt clamp 1300 mm bolting at 1100 mm position only	±2400
		Through bolt clamp 1400 mm bolting at 400 mm and 1400 mm positions	±3300
N-78HL4-BDV	NEXTracker 1P	NT Standard Rail (400); Mounting hole: 400mm	±1800
	PVH AXONE DUO- INFINITY	Short rail: 91x428x1; Mounting hole: 400mm	±1600
		Long rail: 29x1228x1.5; Mounting hole: 400 & 1200mm	+2100/-2300
N-66HL4M-BDV	NEXTracker 1P	NT Standard Rail (400); Hole spacing: 1096mm; Mounting hole: 400mm	+1800/-1800
	ATI V3	400mm thru-bolt rail (21011/21063); Hole spacing: 1096mm; Mounting hole: 400mm	+1800/-1800
N-66HL5-BDV	NEXTracker 1P	NT Standard Rail (400); Mounting hole: 400mm	+2100/-2100
		NT Standard Rail (790); Mounting hole: 790mm	+2600/-2400
	PVH AXONE DUO- INFINITY	Short rail 91x428x1; Mounting hole: 400mm	+1300/-1250

Table 8 Tracker installation methods and related maximum test loads

Avoid installing PV modules above torque tube connector, post heads or any other part of tracker higher than the torque tube if there is not a certain horizontal distance (For the 66QL6 series, it is recommended to be 450mm-700mm; for other products, it is recommended to be 300mm - 500mm, as shown in Figure 7) between edge of the module and

any of those tracker parts. The aim of this distance range is to prevent interference between the tracker structure and the module junction box during tracker rotation, which may cause damage to the junction box and affect module performance.

For detailed installation drawings and installation method, please refer to installation manual of tracker supplier. For other tracker systems that are not listed in Table 8, please contact Jinko for more information (cs@jinkosolar.com).

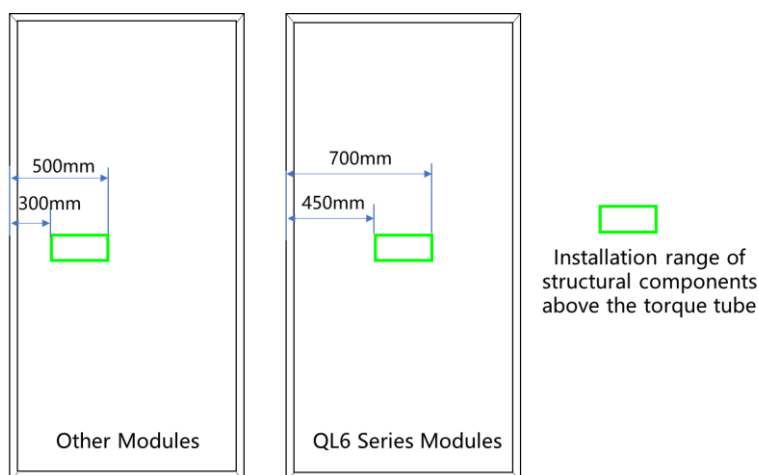


Figure 7 Diagram of horizontal installation distance for tracker components above the torque tube

5. Electrical Installation

5.1 Electrical property

- For the electrical design, please find the main electrical parameters shown in the datasheet and product label.
- Modules must be installed and connected with the foam tube removed first. JinKoSolar does not guarantee the safety of the product or the consistency of the technical parameters if the connectors and tools used are not officially designated by JinKoSolar or are not installed according to specifications.
- Modules can be connected both in series or in parallel, reasonable design is required according to the system configuration. In any case, string size (quantity of modules that can be connected together, in series/parallel) must be calculated taking into consideration local regulations, chosen inverter and project location (environmental conditions, which may vary from STC). This must be done by qualified professionals.
- When modules are in series, the string voltage is the sum of each module individual voltage. Modules with different electrical parameters must not be connected in series. String voltage must not be higher than the maximum permitted system voltage, as well as inverter's maximum input voltage and other electrical devices that may be installed in the system. To assure this, we recommend calculating the open circuit voltage of the array at the lowest expected ambient temperature of the project location, by using the following formula:

$$\text{Max. system voltage} \geq N \cdot V_{oc} \cdot [1 + TC_{VOC} \cdot (T_{min} - 25)]$$

Where:

N = Number of modules in series.

- V_{oc} = Open circuit voltage (refer to product label or datasheet).
 TC_{voc} = Temperature coefficient of open circuit voltage (refer to product label or datasheet).
 T_{min} = Minimum ambient temperature.

- When modules are connected in parallel, the string current is the sum of each module individual current. In this case, the maximum recommended number of parallel connections is:

$$N \leq \frac{Fuse\ Rating}{I_{sc}} + 1$$

Where:

- N = Number of maximum parallel connections.
 Fuse Rating = Maximum fuse rating value in an array string (refer to product label or datasheet).
 I_{sc} = Short circuit current (refer to product label or datasheet)

- PV modules connected in series shall have similar current, (please contact JinkoSolar if there is any concern), and modules must not be connected together to create a voltage higher than the permitted system voltage stated in the label of the module. The maximum number of modules in series depends on system design and the rating of the inverter used.
- The maximum current rating of the module array is identified on the product nameplate or in the product specification, and the current rating also relates to the maximum reverse current that can be applied to a single module. For example, when a module is shaded, other modules connected to it will form a load causing a current loop. Depending on the maximum fuse current rating of the modules and the local electrical installation standards, the connection of parallel strings of modules needs to be fitted with suitable fuse protection for circuit protection reasons.
- Open the combiner box of the control system and connect the conductor from the PV arrays to the combiner box in accordance with the design and local codes and standards. The cross-sectional area and cable connector capacity must satisfy the maximum short-circuit of the PV system (for a single module, it is recommended that the cross-sectional area of cables be 4mm² and certified to IEC 62930 type 131), otherwise cables and connectors will become overheating for large current. Please pay attention that the temperature limit of cables is 90°C.
- Connectors from different manufacturers should not be mated together. If such a replacement is needed, please contact JinkoSolar.
- Jinko modules junction boxes contain factory-installed bypass diodes. These diodes are connected in parallel with each cell string to allow the current flow to the next cell array in case there are hot spots or partial shadows in any of the other cells' string. This will avoid performance and heating losses.
- If modules are incorrectly connected to each other, the bypass diodes, cables or junction boxes may be damaged.
- Keep in mind that bypass diode is not an over-current protection.
- Please do not try to open module junction boxes by yourself.
- Bypass diodes from different manufacturers should not be mated together. If such a replacement is needed, please contact JinkoSolar.

- For floating projects, please contact local technical support.

5.2 Wiring and cables

- The wiring and cable management should be designed, reviewed and approved by the EPC contractor, especially for assemblies using tracking brackets. The required cable lengths should be checked in advance, to ensure good functionality and proper installation.
- The wiring should be checked for correctness before starting the system. If the measured open-circuit voltage (Voc) and short-circuit current (Isc) do not match the specifications provided, there may be a wiring fault.
- Each string should be left open-circuit until the system is connected to the grid after the modules have been installed. Appropriate protection is required to avoid the ingress of water vapour and dust.
- JinkoSolar recommends the following wiring methods (see Table 9).

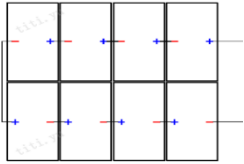
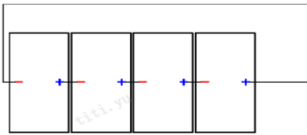
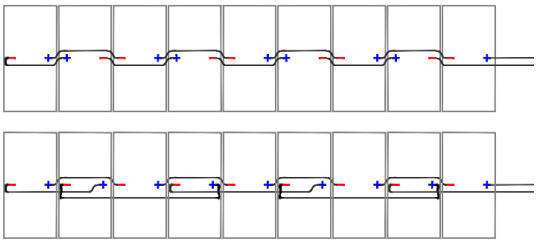
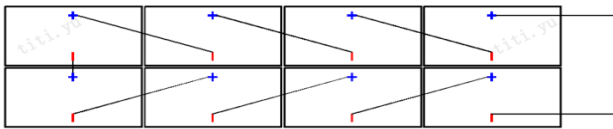
Vertical mounting: Select standard cables	 Dual-row module wiring schematic  Single-row module wiring schematic
Vertical mounting: Custom length cables	 Leapfrog wiring
Horizontal mounting: Custom length cables	 Module wiring schematic

Table 9 Module wiring schematic

(Note: the exact number of series connections will be determined according to the actual design)

- When wiring modules, always keep in mind the minimum bend radius (see Figure 8). This minimum bend radius is the permissible curvature the cable can be bent around. Depending on the type of cable, a specific coefficient (Cable multiplier), must be applied. For our DC cables this parameter is 4.

$$\text{Minimum Bend Radius (R)} = \text{Cable Outer Diameter (d)} \cdot \text{Cable Multiplier}$$

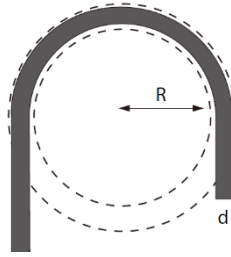


Figure 8 Minimum Bend Radius

- Jinko does not guarantee the safety of products and technical parameters consistency if the connecting heads and tools used are not officially specified by Jinko or are not installed according to the official requirements.
- Before the commissioning and operation of the power station, verify the electrical connection of modules and strings, ensuring all connections and polarities are correct, and the open circuit voltage meets the requirements of the acceptance criteria. Incorrect connections may lead to electric arc and electric shock. Please always check that all electric connections are reliable and that all connectors are fully locked.
- Open the combiner box of the control system and connect the conductor from the PV arrays to the combiner box in accordance with the design and local codes and standards.
- JinkoSolar modules are equipped with two/three IP68 split junction boxes (with two junction boxes for QL6 series modules and three for other modules), which provide necessary safety protection for cable and wiring connections, including protection against contact with non-insulated electrical components.
- Figure 9 is for illustration only; refer to the module specifications for the specific dimensions of each junction box.

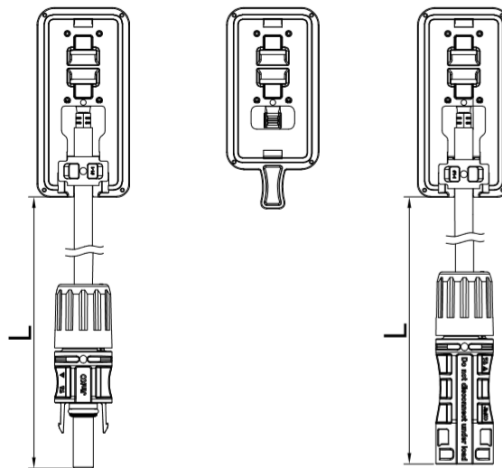


Figure 9 Split junction box diagram

5.3 Connector Insertion

- Prohibit modules, junction boxes and connectors from coming into contact with unapproved chemicals: e.g., petrol, oil, acetone, alcohol, film strippers, potting compounds, TBP, cleaning agents, herbicides, rust inhibitors, descaling agents, etc. For more information, please contact JinKoSolar technical support department.
- After the modules are taken out of the box and installed, the connectors between the modules need to be connected

in time and kept in a dry and clean condition to prevent the ingress of pollutants such as dust and water vapor.

- In areas with heavy dust, high salinity, or severe pollution, dust plugs must be installed on the connectors to prevent contamination before the connectors are mated. Prior to purchasing the modules, it is necessary to communicate with JinKoSolar about the project site conditions to ensure the provision of dust plugs. However, please note that the exposure time of dust plugs to the environment should not exceed one month.
- In the case modules are installed within 50m to 500m from the seashore, the connectors shall be protected, i.e., adding dust plugs. After removing the dust plugs, connect the connectors immediately and take other anti-rust measures to prevent rust. Offshore PV modules are recommended if installation within 50 metres is required, please consult JinKoSolar for details.
- Before connecting the male and female connectors, ensure that the contacts are free of corrosion, clean, and dry, and check the wiring status. When connecting, insert the male and female connectors until they engage, then gently pull to check if the engagement is secure. The correct/incorrect engagement visual diagram is shown in Figure 10 (for reference only; the actual connectors shall be based on the ones received on-site).




Figure 10: Schematic Diagram of Correct/Incorrect Engagement of Connectors

- JinKoSolar does not guarantee the safety of the product or the consistency of the technical parameters if the connectors and tools used are not officially designated by JinKoSolar or are not installed according to specifications
- When properly connected, the connector meets IP68 (IEC 60529) requirements, but prolonged submersion in water is prohibited.

5.4 Grounding

- For safety reasons and to protect modules from lightning and electrostatic damage, the module frame must be grounded. The grounding design and the materials used should be in accordance with local national, regional or international regulations, codes, laws and standards, and the grounding connection should be carried out by qualified electricians.
- The grounding device must penetrate the anodic oxide film of the component frame and make full contact with the interior of the aluminium alloy, and the grounding conductor must be connected to earth ground through a suitable grounding electrode.
- There are grounding holes with a diameter of 4mm on the long side of the back frame of the module, by the edge part. The grounding hole on the frame is marked with typical grounding symbol ($\perp$) according to IEC 61730-1:2023 standard. These holes can only be used for grounding with bolts, so cannot be used for module installation. This method includes bolt, flat washer, start washer, washer and nut (see Figure 11) . The bolts should be tightened when grounding is installed. The frame of the module must not be punched with additional holes and no damage should be done to the module frame or the grounding wire.

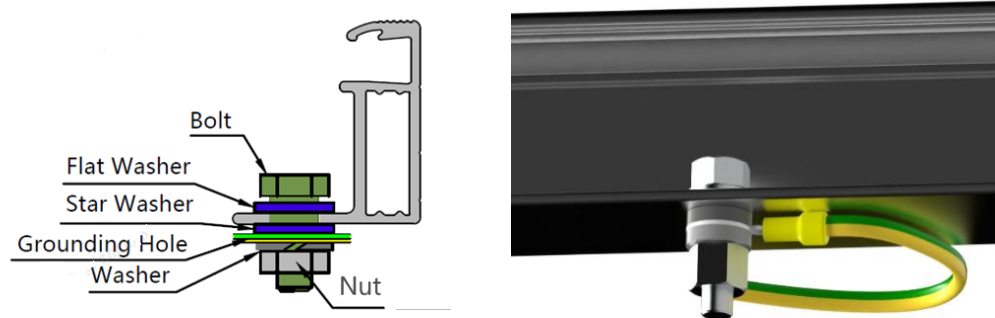


Figure 11. Grounding hole with bolts

- Grounding devices and materials must be provided by qualified manufacturers. Bolts, nuts and washers shall be of a size to match the grounding hole and made of stainless steel, and grounding wires shall be made of copper core wires with a size of AWG 6-12 (4-14 mm²) and 90°C, and shall be in accordance with relevant local national, regional or international regulations, laws and standards.
- JinKoSolar allows other grounding methods. However, the following requirements need to be met:
 - a) It is the sole responsibility of the Installer to select the correct grounding system.
 - b) Said grounding system must comply with the corresponding electrical codes.
 - c) JinKoSolar modules must be properly grounded.
 - d) The chosen grounding methodology does not affect the JinKoSolar Power and Product Warranty in any way.
 - e) JinKoSolar is not responsible for any failure or defect caused by the selected grounding methodology.

6. Maintenance and care

It is required to perform regular inspection and maintenance of the modules especially during the warranty period. Please for details, kindly O&M manual. To ensure optimum module performance, JinKoSolar recommends the following maintenance measures:

6.1 Visual Inspection

Inspect the modules visually to find if there are any visual defects, if there are, the following items should be evaluated:

- a) If the modules are observed having slight module color differences at different angles, this is a normal phenomenon for modules with anti-reflection coating technology. If the colors are within the cell, please consult JinKoSolar for further analysis.
- b) Whether the glass is broken.
- c) No sharp objects are in contact with the PV module surfaces.
- d) The PV modules are not shaded by unwanted obstacles or foreign material.
- e) Corrosion along the cells' busbar. The corrosion is caused by moisture intrusion through the module rear side of the module. Check the rear side of the module for damage.
- f) Check whether the back sheet is burnt.

- g) Check if screws and mounting accessories are tight, adjust and tighten as necessary.

6.2 Cleaning

- A buildup of dust or dirt on the module front face will result in a decreased energy output. Clean the module preferably once per month, more frequently in dusty conditions, using soft cloth dry or damp. Water with high mineral content may leave deposits on the glass surface and is not recommended. It is recommended to use neutral water of the PH value ranging from 6.5 to 8 to clean the glass, so as not to cause damage to the glass coating layer.
- Never use abrasive material under any circumstances.
- In order to reduce the potential for electrical and thermal shock, JinKoSolar recommends to clean PV modules during early morning or late afternoon hours when solar irradiation is low and the modules are cooler, especially in regions with hot temperatures.
- Never attempt to clean PV module with broken glass or other signs of exposed wiring, as this presents a shock hazard.
- No recommend to priority use chemicals when cleaning modules as this may affect the module warranty and energy yield. For the environment with extreme climate, please contact JinKoSolar after-sales department for specific requirement if needed.
- For single-side module, backsheet cleaning is not necessary; for dual-glass module, cleaning the module backside regularly when necessary, and follow the requirements in 6.1 a) – e). Please wear insulated gloves and pay special attention to the cables and electrical connections during the backside cleaning.
- If a water gun is used to flush the modules, be careful of the water pressure to avoid damaging the modules.
- If using a hose or backpack style pressure set we recommend the pressure of the water should be less than 675kPa.

6.3 Inspection of Connectors and Cables

It is recommended to implement the following preventive maintenance every 6 months:

- Check the sealing gels of the junction box for any damage.
- Examine the modules for signs of deterioration. Check all wiring for possible rodent damage, weathering and that all connections are tight and corrosion free. Check the electrical grounding.

Global Sales & Marketing Center

No.1, Lane 1466, Shenchang Road,
Minhang District, Shanghai, China

Postcode: 201106

Tel: +86 21 5183 8777

Fax: +86 21 5180 8600

Jiangxi Manufacturing Base

No.1 Yingbin Avenue
Economic Development Zone,
Jiangxi Province, China

Postcode: 334100

Tel: +86 793 858 8188

Fax: +86 793 846 1152

Zhejiang Manufacturing Base

No.58 Yuanxi Road,
Yuanhua Town Industrial Functional Zone,
Haining City, Zhejiang Province, China

Postcode: 314416

Tel: +86 573 8798 5678

Fax: +86 573 8787 1070

Official website: www.jinkosolar.com

Technical Support: rtms@jinkosolar.com | Pre-sale: Globalpresales@jinkosolar.com | Aftersales: CS0001@jinkosolar.com